




Mounting Templates

For all mounted templates it is critical to print on 8.5x11 paper without scaling. Use the ruler below as a reference to make sure that the print is sized properly.


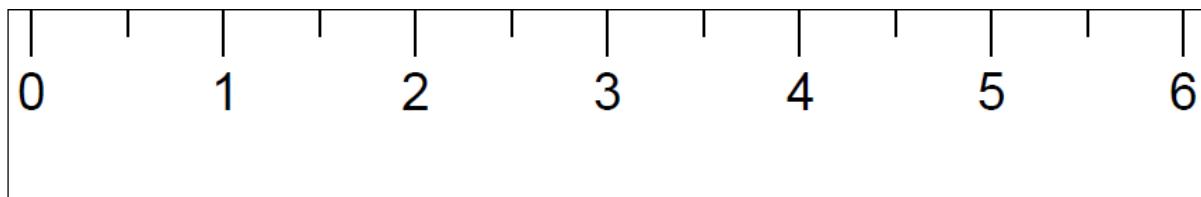


Side Mount

Cut out the profile below and line it up on the mounting surface. Use the holes as centermarks for drill locations.

Drill using a $\frac{1}{4}$ " bit.

NOTE - Ensure that drilling does not compromise structural integrity of the part and that the drill bit and any mounting hardware is clear of water passages or other sealed features.

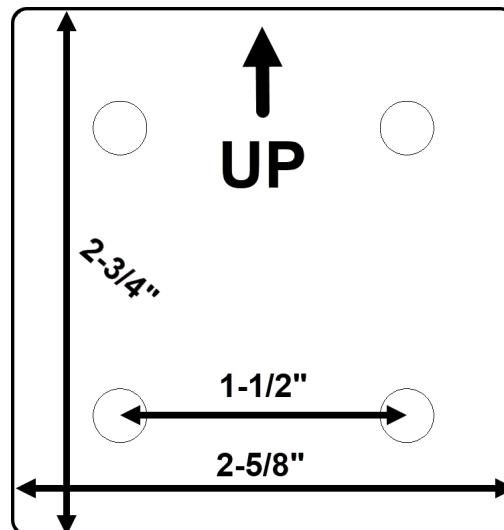
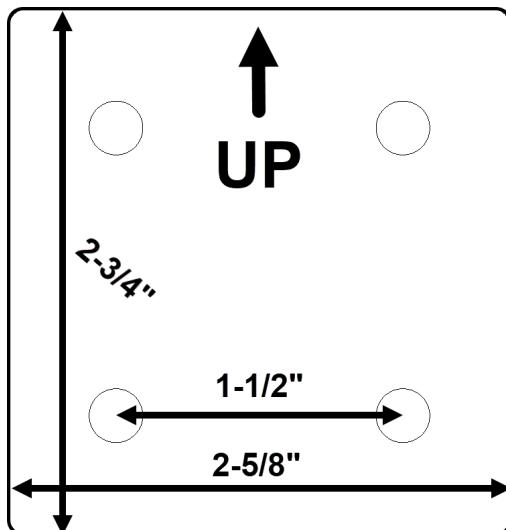


Universal Mount

Cut out the profile below and line it up on the mounting surface. Use the holes as centermarks for drill locations.

Drill using a $\frac{1}{4}$ " bit.

NOTE - Ensure that drilling does not compromise structural integrity of the part and that the drill bit and any mounting hardware is clear of water passages or other sealed features.

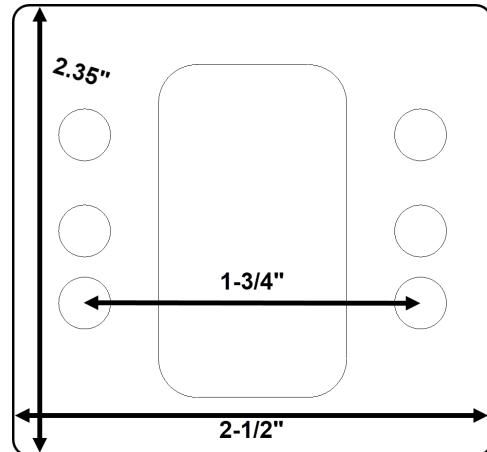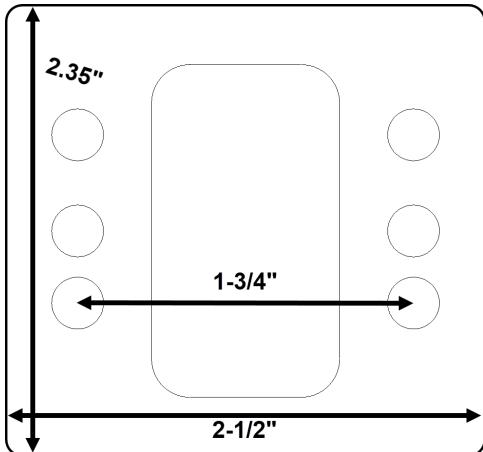

LinQ Mount

Cut out the profile below and line it up on the mounting surface. Use the holes as centermarks for drill locations.

Drill using a $\frac{3}{8}$ " bit.

NOTE - Ensure that drilling does not compromise structural integrity of the part and that the drill bit and any mounting hardware is clear of water passages or other sealed features.

